

# Pairing the Remote Control

The BT PIR



Press & Hold both Buttons  
Wait to hear a Beep

