 


User Manual DA-600-R

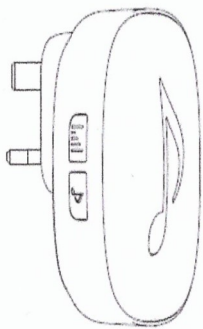


UltraSecure

Packing List


Plug-in Receiver	1 piece (UK 3 pin plug)
English Manual	1 piece

1. System Components And Usage

 Plug-in Receiver

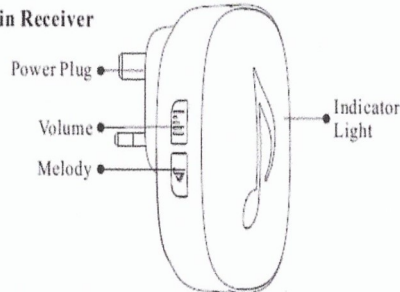

 - Power Plug:** plug the receiver into a socket
- Volume:** 4 adjustable volume levels
- Melody:** 35 optional melodies
- Indicator Light:** flash for several seconds when the sensor is activated

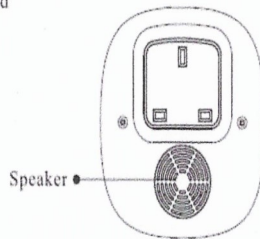

Speaker: sounds for several seconds when the sensor is activated

1

 
2. Operation Instructions

(1) How to add sensors to the plug-in receiver

(up to 32 sensors can be added to one or multiple receivers)

Step 1


Plug the receiver into an outlet

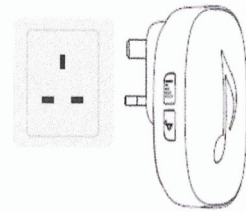

The indicator light of the receiver will flash for 15 seconds meaning normal operation

Step 2

 Press and hold the "Volume" button for 5 seconds and release the button when you hear a beep prompt and the indicator light flash.

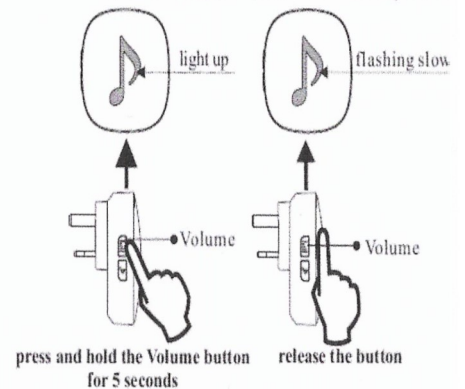


press and hold the Volume button for 5 seconds release the button

2


Step 3

Activate the sensor.

 Note: please have the sensor close to the wireless receiver

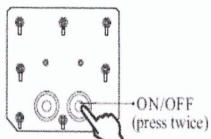

 (the indicator lights once meaning the sensor was activated correctly)



(a ring tone prompt and the indicator light flashes quickly meaning the sensor has been added to the wireless receiver successfully)

Step 4

Activate the sensor again to confirm the sensor has been added to the plug-in receiver already.

(2) How to change the melody for the sensors

 
(35 optional melodies, you can match a different melody for each sensor)

Step 1

Plug the receiver into an outlet

Step 2

Activate the sensor first, and then press the "Melody" button to choose the melody for this sensor

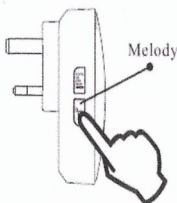

Repeat steps for other sensors which have been added to the receiver already.

(3) How to delete the sensors of the receiver

 
Step 1

Plug the receiver into an outlet

Step 2

Press and hold both the "Volume" button and "Melody" button for 10 seconds and release the buttons when you hear a long beep prompt.

Note: all the sensors will be deleted by this operation.

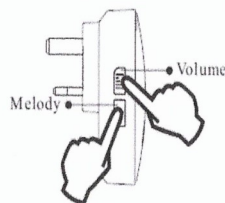


(4) How to adjust the volume

Step 1

Plug the receiver into an outlet


Step 2

 Press the "Volume" once to adjust the volume of the receiver. (4 adjustable volume levels)

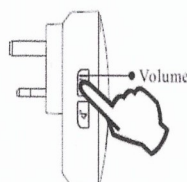

3. Technical Parameters

 Plug-in Receiver

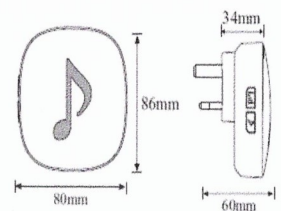

Technical parameters

Item	Technical Parameters
Working Voltage	AC 100V-240V
Working Current	Static Current 20mA; Alarming Current 300mA
Wireless Frequency	433MHz FSK+FHSS

SALES & TECHNICAL:

+44 (0) 1604 589414
ultrasecure.pro

UltraSecure

3

4

5