

4G GPS tracking pendant



Important! Please read below statements:

1. Due to external factors all GPS devices have position error, the position provided by this device is for reference only.
2. There may be delays caused by telecom operators network related problems in certain circumstances.

Main features:

- 4G LTE+3G WCDMA+2G GSM networks
- GPS + LBS +WIFI tracking
- Health management with Pill reminder, Step
- SOS urgent call for help
- Waterproof IP67
- 1.3' LCD HD screen (240*240pdi)
- Web platform/ Phone App/ SMS for position check
- 2-megapixel HD camera function
- Talking clock
- Low battery alarm
- Ringtone to find the pendant

Step 1: Get a new SIM card:

Get a new Nano SIM card and follow the instructions below.

Activate the SIM card's Cellular data plan and Caller ID display function. (Tracking needs data, making phone calls and texts also incurs charges.)

Step 2: SIM card installation and power on.

- 1). Please make sure the tracking pendant is powered off before inserting the SIM card.
- 2). Open the Sim slot with a screwdriver and insert a SIM card into the slot according to the direction in the diagram below.
- 3). To ensure tracker is waterproof, please install the SIM slot cover with screws provided.













Step 3: Learn your GPS Tracking pendant details:

- 4). Please use the magnetic charging cable to charge the pendant.
- 5). Press the power button for 5 to 7 seconds to turn on. The screen will light up and play a ringtone.



Status instructions:

When the screen is lit up, it displays the GSM signal, battery, date, time and pendant work status as below chart.

	4G Network		GPS position OK
	3G Network		WIFI connection OK
	2G Network		Network signal
	No Network		Battery level
	No SIM card		Alarm clock remind

Step 4: Install APP:

The App can be installed by scanning the QR code in the user manual or download from the Apple App store or Google Play by searching “Anytracking”.

Web platform:

Go to www.gps123.org Use the same login details as you used for the App.


Step 5: Login App

Login to the App with the 10 digit ID No. on the back label, default password is 123456. (To monitor more pendants at the same time, please contact the seller for a user account.)

Step 6: Location check


➤ Real time tracking and interval for uploading:

Display the last location of GPS pendant. For the latest location, press the “Single-refresh” button on map upper right corner. Press the “interval for uploading” and choose different interval times.

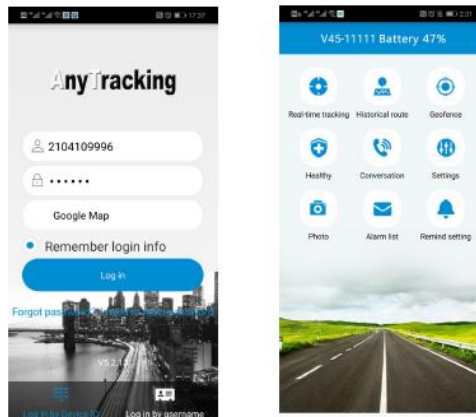

- **Historical route:** Display the historical route of any day in the last 90 days. You can choose whether to filter out LBS location data. Note: LBS means the location data indoors, the accuracy is not good.
- **Geo-fence: Includes GPS-fence and WIFI fence.**
GPS-fence: When the device gets into or out of the GPS-fence area the App will get an alert. (note: we suggest the radius of the GPS-fence of over 300 meters to reduce false alerts.)
WI-FI-fence: You can choose 2 WIFI hotspots as safe zones, when device leaves a safe WIFI zone, the App will get an alert.
- **Health:** Health Step: Turn this on from both App and pendant settings to get wearer’s motion status.
- Pill Alarm:** Set medicine reminders.
- Sedentary reminder:** Set a reminder if they have been idle for too long a time period in the App.
- **Conversation:**
Call to Tracker: To call the pendant number when you click it; (This function works after filling in “Device phone number” in the section of “About the device”).

Voice monitoring: To request a one-way call from pendant to the monitoring number and hear the sound around the pendant.

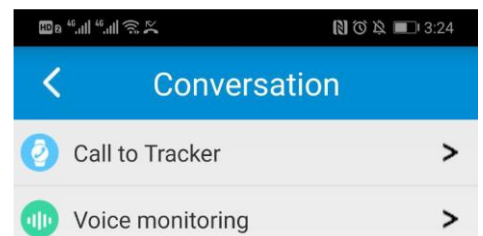

- **Settings:** All settings can be configured when App shows device online with a working SIM card.
- About the device:** Check and edit tracker pendant's information.
- Change password:** Change APP and Web platform's password.
- Main monitoring number:** Set a number used for sending commands and SMS alerts receiving.
- Set SOS number:** These 3 numbers will be used for an SOS call, when the pendant user has an emergency, they long press the SOS key, the tracker will call to these 3 SOS numbers. If no one answers, tracker will call them twice cyclically.
- Phone book:** Set up to 15 numbers as incoming call white list in the phone book. Calls from numbers in this white list will be accepted by the pendant.
- SMS alert switch:** Turn on this setting to enable the pendant to send SMS alerts to main monitoring number or turn it off.
- Scene mode:** Set the alarm type of pendant's incoming call, pill reminder, alarm clock, etc. There are four modes: Ringtone reminder, vibration reminder, ring & vibration reminder and no reminder.
- Answer mode:** Auto-answer: When any numbers in the white list dial the pendant number, after two ring tones, the pendant will auto answer the call, then the user can talk with the caller.
- Push to answer:** When any numbers in the white list call the pendant number, the pendant user needs to press the key to pick up the incoming call and then talk with the caller.
- Clock alarm:** Set three different alarm modes.
- Find device:** After the command is sent, the pendant will give out a ringtone to guide the guardian to find the pendant and the wearer.
- Device Language and time zone:** Set pendant SMS alerts language and time zone. Options are Chinese and English; default time zone is +8 Hrs.
- Remote reboot:** To reboot the pendant.
- Remote power-off:** To power-off the pendant remotely. (The pendant can be only turned on manually after this setting. Please use with caution)
- Factory-Reset:** To default the device back to factory settings.

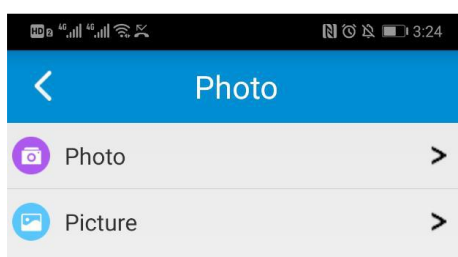
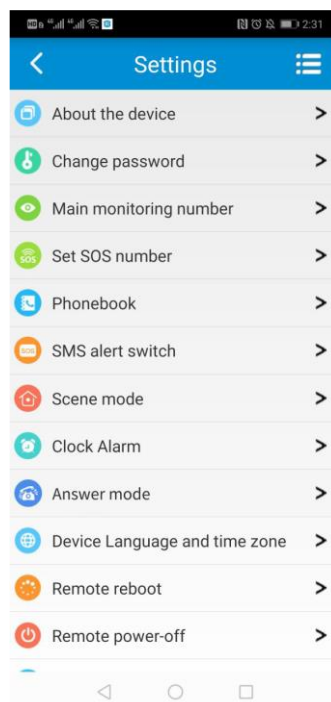


Photo:

To request the pendant to take photos by App command.

Picture:

To check photos taken when SOS alert was triggered and photos were taken by APP command.

➤ **Step 7: Operation of the GPS pendant:**

Calling:

SOS urgent help: Press the pendant SOS button for 3-5 seconds, the pendant will call the SOS numbers in sequence in the App until someone picks up the call. Otherwise, the pendant will call all of them twice cyclically. Once an SOS is triggered, the pendant will take a photo of the surroundings and send it to the App for the guardian to check.

Picking up a call:

1). Press & answer: When a call comes in, the screen will display along with a ringtone and vibration reminder. The pendant user can pick up the call after pressing the power button once or hang up the call by pressing it twice quickly.

2). Auto-answer: After two ring tones, the pendant will pick up the incoming call automatically or press the power button once to hang up the call.

Step 8: Power off the pendant: When no SIM card is in the pendant, press the power button for 5 to 7 seconds until a ringtone is heard to power it off. When a SIM card is inside and signal is OK, to avoid wrong operation, the pendant can be powered off only via App setting.

FAQ:

Q: After inserting a SIM card, it can get an SMS reply, but it displays “Not enabled” on the platform and APP.

A: Please check the pendant SIM Card has LTE data plan.

Q: Device shows online, but it shows “wait for the device response” when you make settings with the APP.

A: Device SIM signal is not good; Device is busy in another process. Please wait and try again.

Q: When I call the pendant, it replies the number is busy.

A: a. Please check the calling number was preset in the App Phonebook. To ensure the pendant user’s safety, only numbers in the “Phonebook” can get through to the pendant.

b. Please make sure the pendant SIM card has caller ID display service enabled.

Q: The displayed time on pendant screen is incorrect.

A: The time display will adjust automatically when it has a working SIM card and works with data.

Q: The location didn’t update in the App map sometimes?

A: a. Please take the pendant to an open space and click the refresh button in the App map.

b. The pendant enters sleep mode to save battery when it is stationary. Move the pendant to wake it from sleep mode and refresh the location in App map.

Q: The SIM card has 4G data plan, but the device still shows “Not enabled “or “offline”.

A: It needs to be configured with APN data, it has been programmed with most SIM cards APN, but hasn’t found out your pendant SIM card’s APN name, APN user name, password, MCC and MNC codes. Find the SIM cards APN settings online before doing the below settings.

Please set main monitoring number first by sending the following text SMS command from your own phone to the pendant sim number. pw,123456,center,your own phone number#

After it has replied, send the below text SMS command to set the APN into the pendant.

The command is: apn,apndata,user,password,MCC,MNC code#

Example: **Apndata:** everywhere **User:** eesecure **Password:** secure **MCC:** 234 **MNC:** 30

apn,everywhere,eesecure,secure,234,30#

If user name and password are blank, please send the text SMS command only keeping the commas as below:

apn,apndata,,,MCC & MNC code#

(Note: The yellow parts are different for different SIM providers and need to be entered correctly for your specific SIM provider. No spaces in the command and all letters in lowercase.)

Q: Sometimes the WIFI fence has no alarm.

A: a. The tracker pendant doesn’t support 5G WIFI. For Android phone, please choose the same 2.4G WIFI hotspot as WIFI fence;

b. iOS phone will choose the phones connected WIFI for fence. If your phones connected WIFI is a 5G one, please don’t set WIFI fence to avoid false alarm or no alarm situation.



Product specification :

Version A bands combination:

4G-FDD: Band 1/2/3/5/7/8

4G-TDD: Band 38/39/40/41

3G-WCDMA: Band 1/2/5/8

2G-GSM: Band 2/3/5/8

Version B bands combination:

4G-FDD: Band 1/2/3/4/5/7/8/12/20/28A

3G-WCDMA: Band 1/2/5/8

2G-GSM: Band 2/3/5/8

GPS locating time: 30sec with cold boot (open sky)

29sec with warm boot (open sky)

5sec with hot boot (open sky)

GPS positioning accuracy: 5-15m (open sky)

WIFI positioning accuracy: Dependent on WIFI range

Working temperature: -20°C ~ +70°C

Working humidity: 5% ~ 95% RH

Host size: 59(L)*45.3(W)*16(H)mm

Host Net weight: 41g

Battery: 600mAh

Scan The QR Code for Support



Alternatively
Call or Email us

Lines open: 08:00 - 17:00 / Mon - Fri

 Tel: (01604) 589414

 info@ultrasecuredirect.com
technical@ultrasecuredirect.com